

Not to be reproduced

- EN Register your product guarantee today! See page 61 for info.
- DE Registrieren Sie noch heute Ihre Produktgarantie! Auf Seite 61 finden Sie weitere Informationen.
- ES Registra tu producto hoy mismo. Más información en la página 61.
- FR Enregistrez votre produit dès aujourd'hui ! Plus d'informations page 62.
- IT Registra oggi il tuo prodotto ghd e verificane l'autenticità. Vai a pagina 62.
- SE Registrera din ghd-produkt direkt och få ett äkthetsintyg! Se sida 62 för information.
- DK Register dit ghd produkt nu og får bekræftelse på dets ægthed! Se side 63 for information.
- FI Rekisteröi tuotteesi saadaksesi takuun voimaan jo tänään! katso sivu 63 lisätietoja.
- NO Registrer ditt ghd produkt nå og få ditt ekthetsbevis i dag. Se 63 for mer informasjon.



gold / max

professional advanced styler /
professional wide plate styler

important safety instructions,
manufacturer's guarantee and
how to register your product

Not to be reproduced

contents

EN English	3 - 8
Validate your guarantee	61
DE Deutsch	9 - 16
Bestätigen Sie Ihre Garantie	61
ES Español	17 - 22
Valida tu garantía	61
FR Français	23 - 28
Enregistrez votre produit	62
IT Italiano	29 - 36
Registra il tuo prodotto ghd	62
SE Svenska	37 - 42
Få din bekräftelse idag	62
DK Dansk	43 - 48
Få din bekræftelse i dag	63
FI Suomi	49 - 54
Vahvista sinun takuusi	63
NO Norsk	55 - 60
Få din bekræftelse i dag	63

important safety instructions

To reduce the risk of burns, electrocution, fire, or injury to persons, read and follow these safety instructions before using your ghd styler.

This ghd styler is for use only as a hairstyling aid, and only with products specifically designed for use with a heated hairstyling aid such as a ghd heat mat.

Handling your ghd styler

The ghd styler contains high-tech, sensitive components therefore please ensure that the product is not dropped. Do not insert foreign objects, paint, burn or disassemble your ghd styler. Do not use your ghd styler if it has been damaged – for example if the styler casing is cracked. If your product is damaged through misuse or abuse, this will not be covered under your guarantee. This does not affect your statutory rights.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental

capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved, by a person responsible for their safety.

Children shall not play with the appliance. Cleaning and user maintenance shall not be

made by children without supervision.

BURN HAZARD: Keep appliance out of reach from children, particularly during use and during cool down after use.

When the appliance is connected to a power supply never leave it unattended.

The ghd styler is not suitable for use with synthetic hair. It is possible that colour may permanently transfer onto the styler if used on dyed hair.

warning: keep away from water

Do not use this device in a bathtub, shower, or water filled reservoir.

1. When the appliance is used in a bathroom, unplug it after use since the proximity of water



presents a hazard even when the appliance is switched off.

2. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electric circuit supplying

the bathroom. Ask your installer, or a qualified electrician, for advice.

3. Do not reach for the for the appliance if it has fallen into water.

4. Do not spray or apply wet styling aids directly onto the ghd styler.

warning: electricity

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of electrocution:

Never operate this appliance if it is not working properly, or if it has a damaged power cord or plug. If the power cord or plug is damaged, it must be replaced by Jemella Ltd.

1. Only use with 110–240V, 50-60 Hz power supply.
2. The appliance should never be left unattended when plugged in.
3. Keep the power cord away from heated surfaces. Do not wrap the power cord around the appliance. Do not hang the ghd styler by the power cord.
4. Always unplug the ghd styler immediately after using.
5. Do not use an extension power cord with this appliance.
6. Do not use a voltage inverter or generator with this appliance.
7. Your ghd product is a class II electrical appliance and should not be connected to an earth connection.



warning: hot surfaces

The ghd styler heater plates are hot for effective styling.

To reduce the risk of burns:

1. NEVER touch the styler heater plates.
2. Avoid holding or touching the styler beyond the raised finger guard.
3. When not styling always lay the ghd styler on a flat heat-resistant surface such as a ghd styler heat mat.
4. When styling is complete, always switch off the ghd styler and unplug it from the power supply.
5. Wait for the ghd styler to cool before storing.
6. After styling the plates remain hot – for safe cooling cover the plates with the heatproof plate guard.
7. When the ghd styler has cooled, fold the power cord in the same way as it was first delivered in its packaging. Do not wind it around your hand or the body of the ghd styler as this can lead to early failure of the power cord.
8. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

 
Your ghd styler is not only attractive to you, but also to your children. Please ensure you always store your ghd styler out of reach of children, particularly during use, especially when cooling.

For safe cooling, cover the plates with the heatproof plate guard. WARNING: even with the plate guard on, the styler heater plates are still very hot, do not touch the plates or allow children or those with reduced physical, sensory or mental capabilities, or lack of experience and knowledge to touch the styler whilst it is cooling.


operation

Ensure that hair is completely dry before using the ghd appliance.

ghd gold

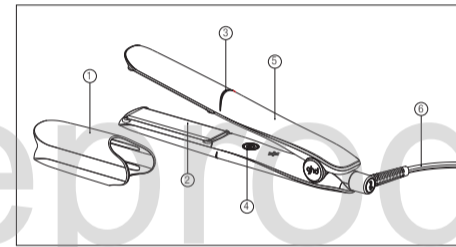

ghd max

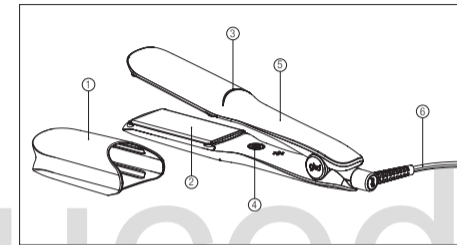 

- ① Heatproof plate guard
- ② Styler heater plates
- ③ Raised finger guard. Avoid holding or touching the styler beyond this feature.
- ④ On/Off Switch and indicator light
- ⑤ Styler body
- ⑥ Power cord

1. Plug the ghd styler into the power supply. The ghd styler will momentarily flash around the ON/OFF switch and beep to indicate that it is connected to a power supply and is in standby mode.

2. To turn on the ghd styler, press and hold the ON/OFF button for at least 1 second. The ghd styler will play a short start-up tune and a light will pulse to indicate that the styler is heating up.
3. **IMPORTANT:** the ghd styler reaches the required temperature in seconds, so be careful not to touch the heater plates. Once the ghd styler has reached temperature, it will beep and the light will remain illuminated to indicate that it is ready to use.
4. When you have finished your styling session, press and hold the ON/OFF button until the ghd styler plays the shut-down tune. Once turned OFF, unplug the ghd styler from the power supply and allow it to cool in a safe place.

The ghd styler has the following safety features:

1. **Sleep mode:** if the ghd styler has been left on and has not been used for more than 30 minutes, a safety feature will automatically turn the styler off. The styler will play the shut-down tune, the heating plates will start to cool and the light will slowly pulse.
 - a. To re-start the ghd styler while it is in sleep mode, simply re-press the ON/OFF button for at least 1 second until the start-up tune sounds.
 - b. Note that although the ghd styler is turned off, it is still connected to the mains and should be unplugged from mains electricity at the earliest opportunity.
2. **Protect Mode (ghd Max only):** the ghd Max styler can protect itself against adverse events or power fluctuations. For safety the heaters will turn off, the ghd Max styler will emit a beep and the light will flash white every five seconds. If this occurs un-plug and re-plug at the power supply and then re-start.
3. **Fail safe:** in the unlikely event of a control system error, for safety the heaters will turn off, the ghd styler will emit rapid beeps and the light will flash red every 5 seconds. If this occurs switch off the ghd styler at the power supply and re-start. If the unit does not re-start or the problem persists, contact ghd Customer Service for advice.

user maintenance instructions

Cleaning your ghd styler

1. Unplug the ghd styler from the mains power supply.
2. Always allow the ghd styler to cool before attempting to clean it.
3. Never immerse the appliance in water.
4. Wipe the outside of the ghd styler with a damp cloth. Do not use sharp or abrasive detergents or corrosive products.

Storage

1. Always allow the ghd styler to cool down before storing away.
2. When the ghd styler has cooled down, fold the power cord in the same way as it was first delivered in its packaging. Do not wrap the supply cord around the ghd styler as this can strain the cord and cause premature supply cord failure.

failure to operate

Your ghd styling appliance is a high performance product and if the unit is subjected to large fluctuation in mains power during use it may go into protect mode or fail-safe mode to protect the unit from damage. Therefore, in the unlikely event that your ghd product does not operate correctly, check that your ghd product and mains power supply are switched on, and that power is available.

If your product stops working and the white light or red fault light flashes, please follow the procedure below:

1. Switch off the unit
2. Unplug the unit from the plug socket
3. Wait for 5 seconds and then plug the unit back into the wall
4. Switch the unit back on

If this occurs repeatedly, please contact your local ghd service centre.

For UK plugs, please ensure that the fitted fuse is intact and functioning; if it is not replace it with an identically rated British Standard Fuse.

If in doubt or for further advice, please visit the help section of ghdhair.com or contact an approved ghd stockist or contact ghd Customer Service for further advice.

manufacturer's guarantee

All ghd electrical products are individually tested before leaving the factory. However in the unlikely event of the product proving defective due to faulty workmanship or materials, then, at its sole discretion, ghd will replace the product at no charge with an identical or equivalent product within two years from the original date of purchase. A replacement product assumes the remaining guarantee of the original product or 180 days, whichever provides longer coverage for you. When a product is exchanged, any replacement item becomes your property and the replaced item becomes property of ghd.

To claim under this guarantee please visit 'ghdhair.com/returns' and follow the onscreen instructions to complete your return. Please ensure that you include a proof of purchase with any returned product. Therefore please ensure you keep your proof of purchase in a safe place.



This guarantee only applies to genuine ghd products purchased through ghd-approved stockists, and does not cover products repaired or serviced by anyone other than ghd personnel or ghd representatives. Note that this guarantee may be invalidated where serial numbers or identification have been erased, damaged or modified. This does not affect your statutory rights.

*Neither Jemella Group Limited nor its subsidiaries provides replacement parts for any of its electrical units. If you do not have access to the internet please return your ghd electrical product to the closest ghd address as printed in this leaflet or on the packaging, together with your proof of purchase. For customers in Australia and New Zealand, please phone your closest ghd office on the number printed in this leaflet.

Australia only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

recycling and disposal

Your ghd electrical product is classified as 'electrical or electronic equipment' and must not be disposed of with other household or commercial waste at the end of its working life. When you have no further use for your ghd product, please dispose of it according to your local authority's recycling procedure. For more information contact your local authority.

UK/EU only

Your ghd electrical product should be disposed of in accordance with the WEEE directive (Waste Electrical and Electronic Equipment 2002/96/EC), which ensures that products are recycled using the best available methods and practices to minimise any potential damage to the environment. For more information, contact your local authority or the retailer from whom you purchased this product.

compliance

This ghd styler is compliant with BS EN 60335-2-23 and carries the CE mark. Other approvals include the USA, Australia/New Zealand and South Africa.

For customer queries, contact:

ghd UK

Jemella Ltd
ghd UK: 0845 330 1133
ghd Republic of Ireland: +44 1924 423 400

ghd Returns

Phase 3 (Chilton House)
Sherwood Park
Annesley
Nottingham
NG15 0DJ
UK

ghd Australia

ghd Australia: 1300 443 424
Jemella Australia Pty Ltd

ghd Australia

PO Box 15516
City East
Queensland 4002
Australia

ghd South Africa

ghd South Africa: 086 010 9366

ghd South Africa (Pty) Ltd

PO Box 818
Gillitts
3603
South Africa

ghd New Zealand

ghd New Zealand: 0800 880 209

Jemella New Zealand Ltd

ghd New Zealand
Private Bag 211030
Laurence Stevens Drive
Auckland 2154
New Zealand



ghdhair.com

ghd gold™

ghd and ghd are registered trade marks of Jemella Group Limited.

© Jemella Group Limited 2021.

Designed in Cambridge, UK. Made in China.

EN validate your guarantee

For peace of mind styling with your new ghd product, register your guarantee today for:

- Verification of the authenticity of your ghd product
- Replacement should your ghd product fail within the guarantee period*
- Exclusive offers and deals before anyone else
- The latest news and trends first



Visit ghdhair.com/register or use your QR reader on your smartphone to validate.

This does not affect your statutory rights. *conditions apply, see safety instructions.

DE ihre garantie überprüfen

Für entspanntes Styling mit Ihrem neuen ghd Produkt, registrieren Sie es noch heute, um:

- Die Echtheit Ihres ghd Produkte zu überprüfen
- Ihr ghd Produkt im Garantiefall* auszutauschen
- Als eine(r) der Ersten von exklusiven Angeboten zu erfahren
- Die aktuellsten News und neusten Trends zu erhalten



Besuchen Sie ghdhair.com/de oder nutzen Sie den QR Code Reader auf Ihrem Smartphone, um Ihr ghd Produkt zu registrieren und Ihre Garantie zu überprüfen.

Die gesetzlichen Rechte bleiben unberührt bestehen. *Für weitere Informationen zur Garantievoraussetzung sehen Sie bitte in den Safety Instructions nach.

ES valida tu garantía*

Disfruta de tu nuevo producto ghd con toda tranquilidad y registra ahora tu garantía para:

- Verificar la autenticidad de tu producto ghd
- Facilitar la reemplazo de tu producto ghd en garantía*
- Recibir nuestras ofertas exclusivas
- Estar al día de las últimas novedades y tendencias



Visita ghdhair.com/us/register o utiliza el lector QR de tu smartphone y valida. *Esto no altera tus derechos en materia de garantía.

Este registro no afecta a tus derechos legales. *La garantía sólo será válida presentando la correspondiente prueba de compra ó factura. Para más información acerca de las condiciones de garantía consulta el manual de instrucciones.

FR enregistrez votre produit

Pour plus de sérénité lors de l'utilisation de votre nouveau produit ghd, enregistrez-le sur notre site Internet afin :

- De vérifier son authenticité
- Qu'il puisse être remplacé en cas de problème durant la période de validité de sa garantie*
- De recevoir nos offres exclusives en avant-première
- D'être tenu(e) informé(e) des dernières tendances et nouveautés ghd



Rendez-vous sur ghdhair.com/us/register ou scannez le QR code depuis votre mobile pour l'enregistrer.

Ceci n'affecte en aucun cas les droits statutaires dont vous bénéficiez en vertu des textes applicables. * Dépend du produit ghd concerné, voir les conditions applicables dans le guide de consignes de sécurité du produit.

IT registrazione del prodotto

Per un utilizzo sicuro del tuo prodotto ghd, registralo* online sul sito ghd nella sezione dedicata. In questo modo potrai:

- Verificare l'autenticità del tuo prodotto
- Ricevere aggiornamenti su offerte esclusive ghd
- Essere sempre informata sui trends del momento



Visita ghdhair.com/it/register oppure utilizza il lettore QR sul tuo smartphone per registrare il tuo prodotto.

Quanto scritto non pregiudica i diritti stabiliti per legge. * La mancata registrazione non preclude in alcun modo il diritto alla garanzia. Per informazioni sulla garanzia consultare il capitolo 'garanzia' nel presente manuale di istruzioni di questo prodotto ghd.

SE registrera din garanti

Registrera din ghd-produkt redan idag så att du är säker på att det är en originalprodukt från ghd du använder när du stylar ditt hår:

- Äkthetsbevis på din elektriska ghd-produkt.
- Reperation eller ersättning av ghd-produkt om du får problem med den inom din garantiperiod*.
- Exklusiva erbjudande före alla andra.
- Var först med att få information om de senaste ghd-nyheterna och trenderna.



Besök ghdhair.com/registrera och använd din QR läsare på din smartphone för validering av produkten.

Detta påverkar inte dina lagliga rättigheter. *Användningsinstruktioner, se säkerhetsinstruktioner.